GO RANGE OPERATING GUIDE

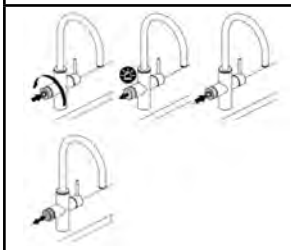
FAUCET OPERATION

WATER TYPES – COLOR CODES

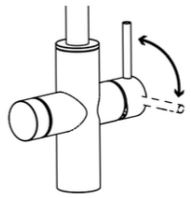
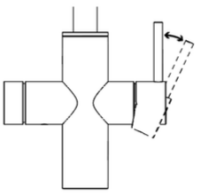
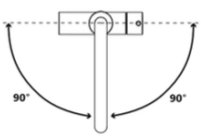
Status LED	Color	Meaning
Dimmed white		Standby mode
Blue		Filtered chilled
Green		Filtered sparkling
Light Green		Semi-sparkling
White		Filtered Ambient
Red		Filtered Boiling

OPERATING INSTRUCTIONS

Push-Turn Knob (Filtered)

	To activate the faucet if it is in standby mode push the knob briefly and release. After a few seconds of not using the faucet, it will switch automatically into standby mode.
	Choose the desired water type by turning the knob clockwise or counterclockwise until the corresponding color is displayed.
	Start the water dispensing by the following control: • Boiling water: Push briefly - release - push & hold • All other types: Push briefly - release
	Stop the water dispensing by the following control: • Boiling water: Release • All other types: Push briefly - release

Single Lever Mixer (Unfiltered)

	Turn the faucet lever upwards for cold water and downwards for hot water.
	Open the faucet by moving the lever towards you. The further you move the lever towards you, the more water will flow from the faucet.
	The faucet can be rotated up to 180 degrees.

PORTION CONTROL INSTRUCTIONS

Push-Turn Knob (Filtered)

Start the water dispensing for preset values by the following control: • Boiling water: Push briefly - release - push & hold - quickly turn clockwise or counterclockwise (1 step / 2 steps / 3 steps) to select the corresponding preset value - release • All other types: push & hold - quickly turn clockwise or counterclockwise (1 step / 2 steps / 3 steps) to select the corresponding preset value - release
Stop the water dispensing by the following control: • All types: push briefly - release

UNDERCOUNTER SYSTEM OPERATING INSTRUCTIONS

	“CO2 -level”: The indicator button changes color according to the CO2 level.
	“Filter runtime”: The indicator changes color according to filter capacity.
	“Cleaning”: The indicator changes color when cleaning is required.
	“Connectivity”: The indicator changes color based on connectivity and software updates.
	“Reset/Eco Mode”: The indicator changes color indicating unit mode and reset status.

	Status LED	Color Code	Meaning
	Constant: Green		CO_2 > 43 psi
	Flash: Red		CO_2 < 43 psi / CO_2 cylinder empty

	Status LED	Color Code	Meaning
	Constant: Green		Filter with a remaining filter capacity > 10%
	Flash: Red		Remaining filter capacity ≤ 10%
	Constant: Red		Remaining filter capacity ≤ 0% or last filter change > 6 months i.e. filter change required

	Status LED	Color Code	Meaning
	Constant: Green		No cleaning required
	Flash: Red		Cleaning required if last cleaning > 6 months
	Flash: Blue (countdown)		Cleaning process running

	Status LED	Color Code	Meaning
	Constant: White		Connection ready
	Flash: Blue		Connection pairing mode (BLE)

	Status LED	Color Code	Meaning
	Constant: Green		Operation mode active
	Flash: Green		Device restarts
	Flash: Red		Eco mode activated

CLEANING INSTRUCTIONS

Exterior Cleaning (Every Day):

- Topia recommends that you use disinfectant spray for the cleaning of your system.
- Wipe the entire faucet, undercounter systems and cabinet work surfaces with antibacterial wipes and sanitizing spray.
- After completing each clean, dispense water for at least 10 seconds to flush any sanitizer out of the nozzles.
- If your dispenser becomes soiled with residue, fingerprints, debris, etc. clean with hot soapy water using a non-abrasive cloth.
- Keep the area surrounding the dispenser clean and sanitized. The entire machine should be kept free of dust, and the ventilation should not be obstructed, allowing free air flow around the machine.
- If in doubt, please contact your Service Provider.

Internal Sanitizing (Every 6 Months / Every Filter Service /When Cleaning Light Flashes Red):

- This process should be completed by a trained service provider.
- Disconnect the Topia filter by turning it clockwise and pulling it downwards out of the filter head. The valves on the filter head will automatically shut off during this process.
- Insert one cleaning tablet into the cleaning cup and secure the cleaning cup in the filter head by rotating it counterclockwise.
- Initialize the undercounter system cleaning process by holding in the cleaning button for 5 seconds, where all the buttons will light up blue.
- The cleaning process can take up to 60 minutes, and this time can be used to inspect and clean the exterior of the machine.
- Once the process has been completed, remove the cleaning cup and reattach the filter to the filter head by turning counterclockwise.
- Hold the filter icon for 5 seconds to begin flushing the new filter.